



**HANDLEIDING / MANUAL /
MODE D'EMPLOI / ANLEITUNG
PMS1224
SIGNALERINGSPRINT /
MONITORING PCB /
MODULE DE SIGNALISATION /
PCB-KONTROLLMODUL**




MODELLEN / MODELS / MODÈLES / MODELLE


PMS1224



AANSLUITEN / CONNECTING / CONNECTER / VERDRAHTEN

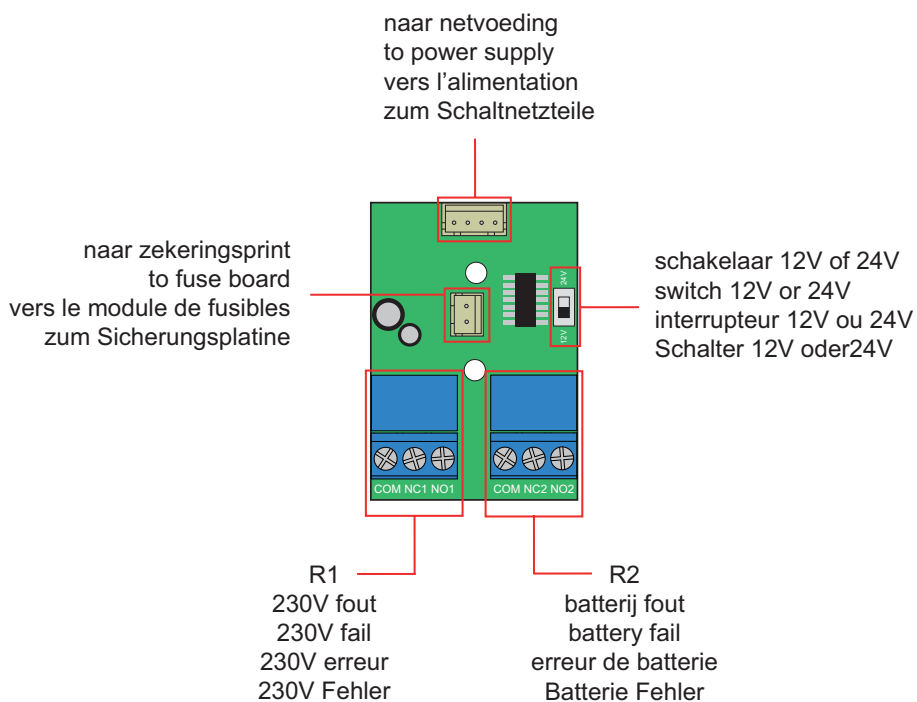

AANSLUITEN / CONNECTING / CONNECTER / VERDRAHTEN

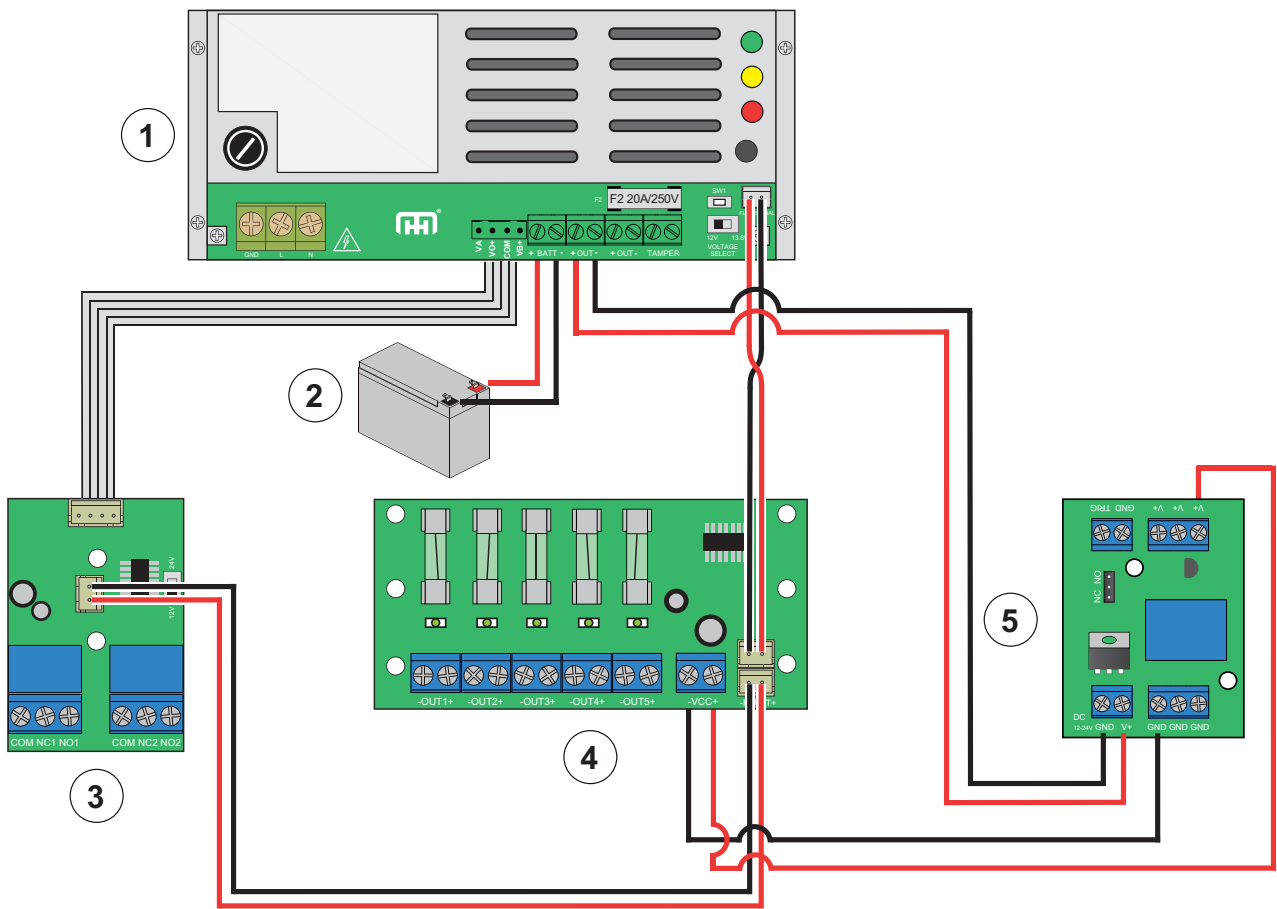

1 NETVOEDING
 POWER SUPPLY
 ALIMENTATION
 SCHALTNETZTEIL

2 ACCU
 BATTERY
 BATTERIE
 AKKU


3 **PMS1224**
 SIGNALERINGSPRINT
 MONITORING PCB
 MODULE DE SIGNALISATION
 PCB-KONTROLLMODUL


4 **FMS5X12**
 ZEKERINGSPRINT
 FUSE PCB
 MODULE DU FUSIBLE
 SICHERUNGSPLATINE

5 **BMP2**
 BRANDMELDPRINT
 FIRE PCB
 CIRCUIT IMPRIMÉ D'ALARME INCENDIE
 BRANDMELDANLAGE PLATINE



AFMETINGEN / DIMENSIONS / DIMENSIONS / ABMESSUNGEN (IN MM)

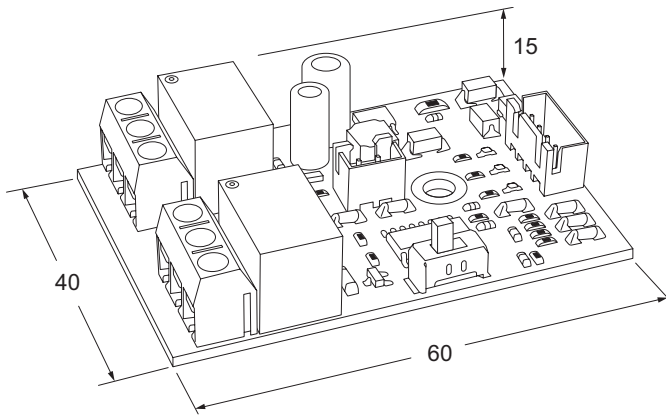

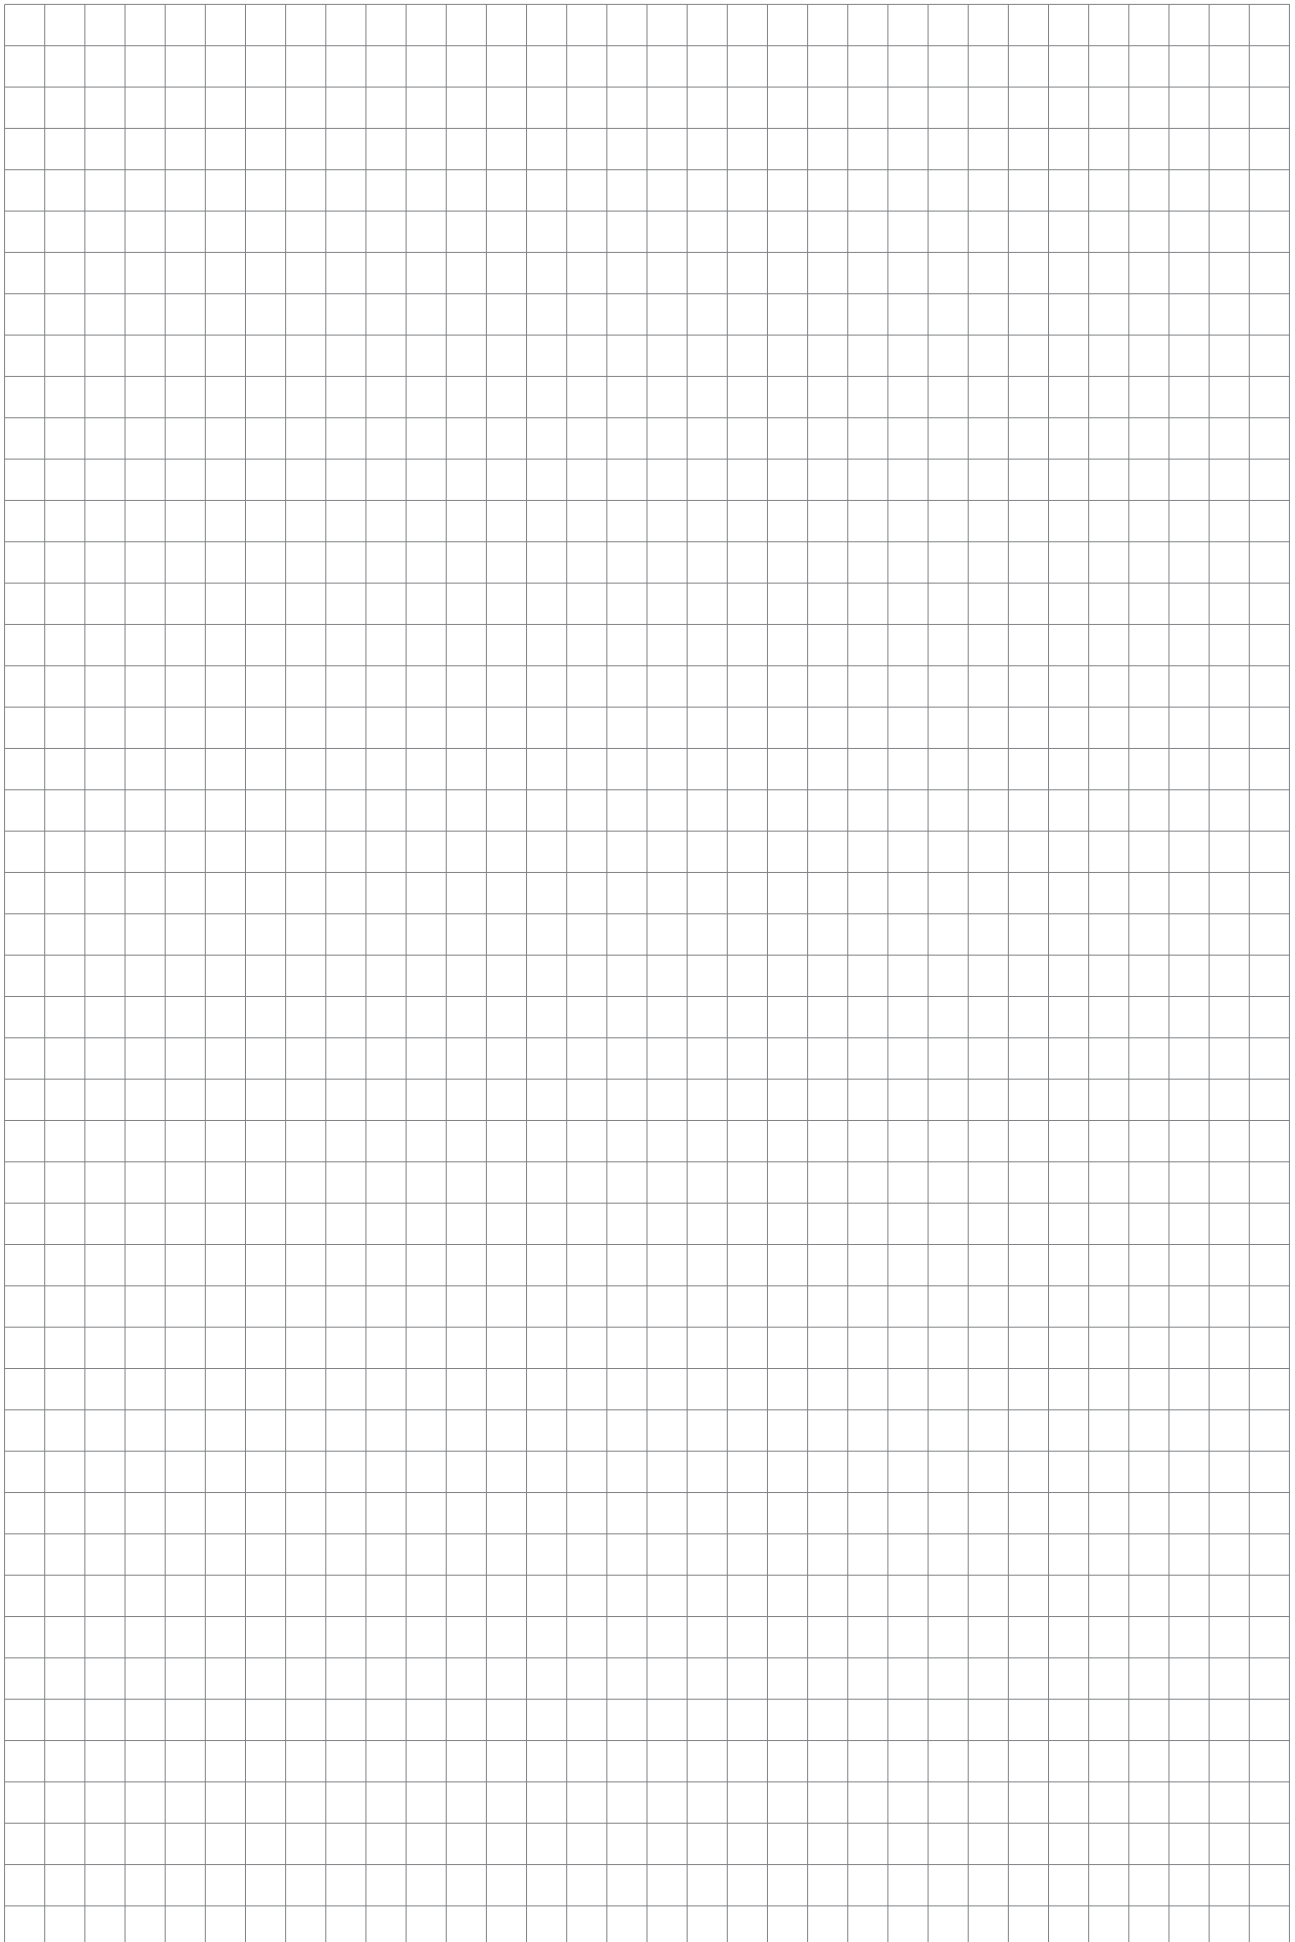

Maasland Groep B.V.
De Hoogjens 51-55a
4254 XV SLEEUWIJK
THE NETHERLANDS
T 088 500 2800
info@maaslandgroep.nl
www.maaslandgroep.nl



Maasland Hou Co., Ltd.
Floor 6, Block E,
Jinao Tech. & Ind. Park,
Dashuikeng,
Guanlan Town, Longhua
SHENZHEN, CHINA
info@maaslandhou.com
www.maaslandhou.com

Maasland Group Belgium B.V.
Eedverbondkaai 242, bus 41
9000 GENT
BELGIË
info@maaslandgroup.be
www.maaslandgroup.be

